


Rack Floor Attachment Kit

Part Number(s): RFAKIT


© Panduit Corp. 2011 INSTALLATION INSTRUCTIONS

CM484C

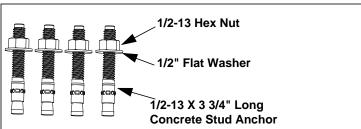

The Rack Floor Attachment Kit includes the following components:


- (4) 1/2-13 X 3 3/4" Long Concrete Stud Anchors
- (4) 1/2" Flat Washers
- (4) 1/2-13 Hex Nuts

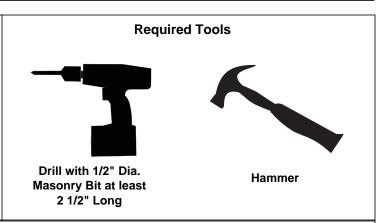

- The Rack Floor Attachment Kit may be used to anchor any of Panduit's 3" Standard Racks, 6" Racks, 4 Post Racks, or Net-SERV and Net-Access Cabinets in place to a concrete floor.
- The 1/2-13 X 3 3/4" Long Concrete Stud Anchors are **not** reuseable once they are fastened into the floor, so it is very important that the rack or cabinet is placed in the desired location **prior to installation**.


Installation

- Step 1: With rack or cabinet in place, mark areas on the floor where the holes will be drilled.
- Step 2: Temporarily remove rack or cabinet to drill (4) holes into floor. The (4) holes must be drilled 2 1/2"-2 3/4" deep using a 1/2" dia. masonry drill bit.
- **Step 3:** Tap the 1/2-13 X 3 3/4" Long Concrete Stud Anchors into all (4) holes in the orientation shown using a hammer. Realign rack or cabinet over the Anchors.
- Step 4: Tighten the rack or cabinet to the floor using the (4) 1/2" Flat Washers and the (4) 1/2-13 Hex Nuts.

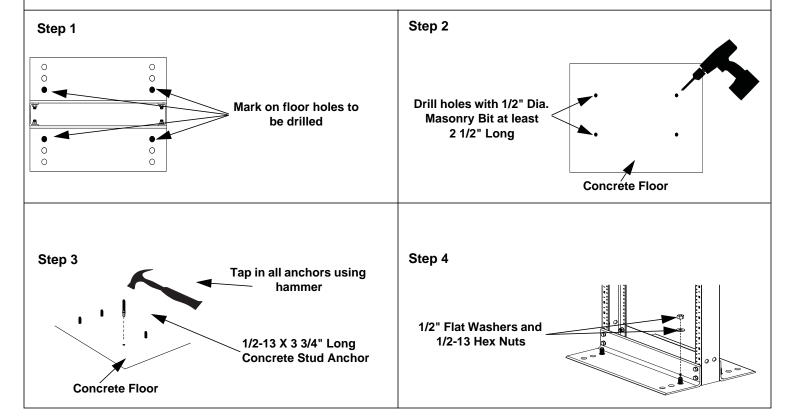

$Net ext{-}SERV$ Cabinet Mounting Footprint

Floor Anchoring Footprint

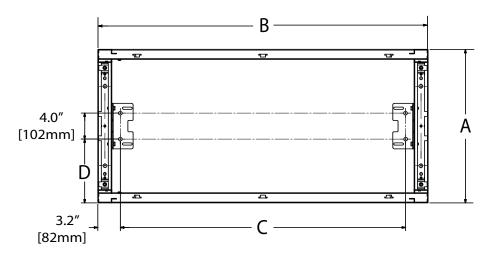


Cabinet Dimensions		Mounting Distances			
Width	Depth	А	В	С	D
23.6" [600mm]	47.2" [1200mm]	23.6" [600mm]	47.2" [1200mm]	40.7" [1035mm]	9.8" [250mm]
27.6" [700mm]	47.2" [1200mm]	27.6" [700mm]	47.2" [1200mm]	40.7" [1035mm]	11.8" [300mm]

Net-Access Cabinet Mounting Footprint (32"X 48" Cabinet Shown) 41" Deep Cabinets- 4 Mounting Hole Locations

48" Deep Cabinets- 6 Mounting Hole Locations

Floor Anchoring Footprint

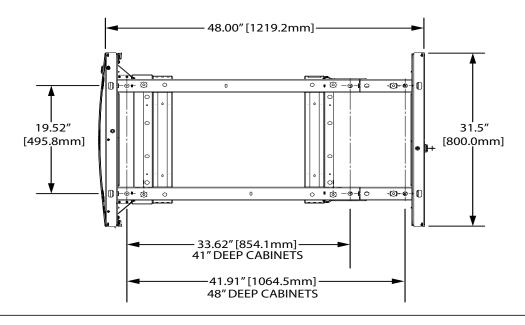

For Instructions in Local Languages and Technical Support:

www.panduit.com

E-mail: cs@panduit.com

Fax: (708) 444-6448